

FUJIFILM
instax SQUARE 2™
INSTANT CAMERA



User's Guide/Safety Precautions

Note on Handling the instax™ SQUARE Instant Film Cartridge (sold separately)

EN Do not open the Film Door until all 10 film sheets of the instax™ SQUARE instant film cartridge (sold separately) have been used. Opening the Film Door will expose any remaining, unused film sheets, rendering the remainder of the film cartridge unusable.

 CAUTION

 


EN For AA batteries, use 4 alkaline **or** 4 nickel metal hydride batteries.
Do not mix alkaline and nickel metal hydride batteries.
Do not mix old batteries with new ones.




How to Install/Replace the Required 4 AA Batteries (4 AA Batteries included)

1

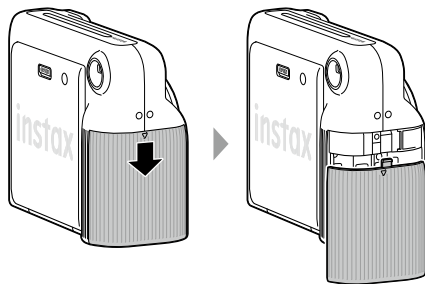


2

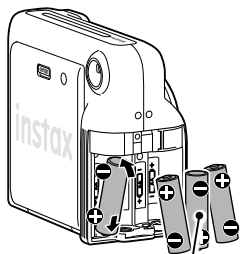 


4 AA-size alkaline batteries (LR6) or
4 AA-size nickel metal hydride batteries (HR6)


 
3

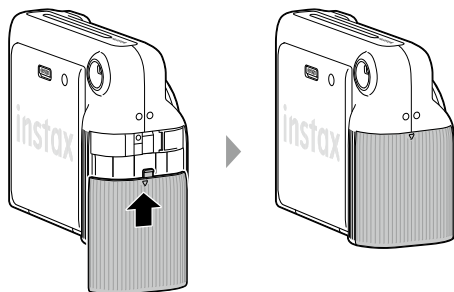

 
How to Insert the instax™ SQUARE Instant Film Cartridge (Sold Separately)

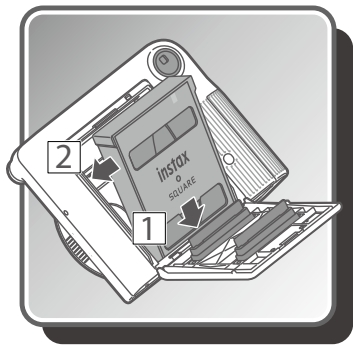


1

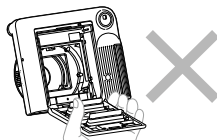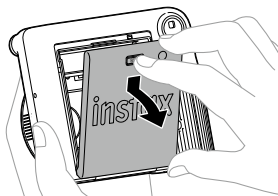  

2

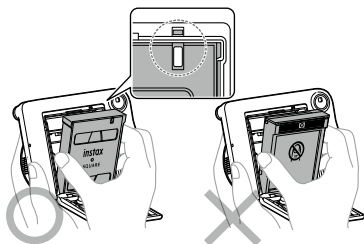 


3

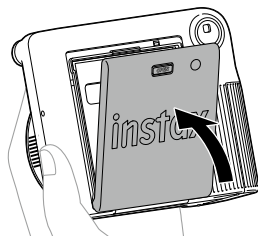 




How to Eject the Black instax™ SQUARE Instant Film Cover

 
1

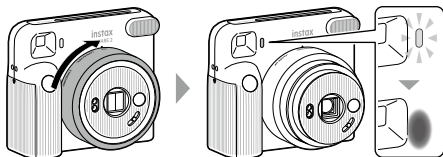


2

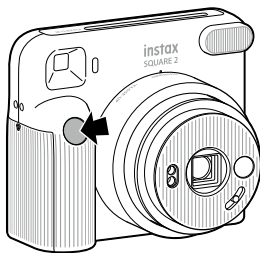 


3

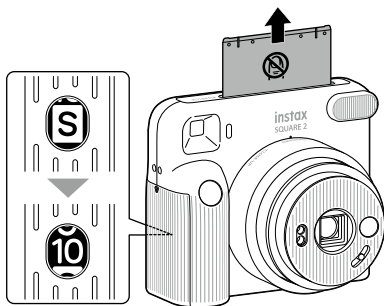 

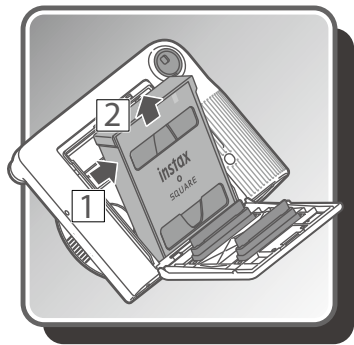 


How to Remove the instax™ SQUARE Instant Film Cartridge (Sold Separately)

 
1

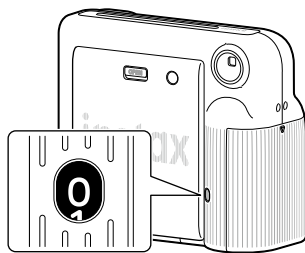

2

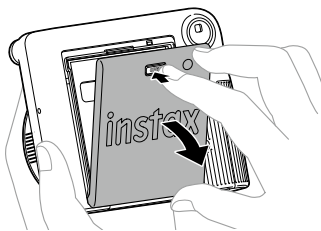 

3

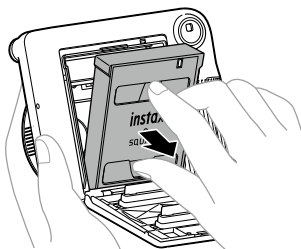 

Before Use

 
Before using the camera, check you have the following:

Supplied Accessories


- Hand Strap (1)
- AA-Size Alkaline Batteries (LR6) (4)

Part Names

Front

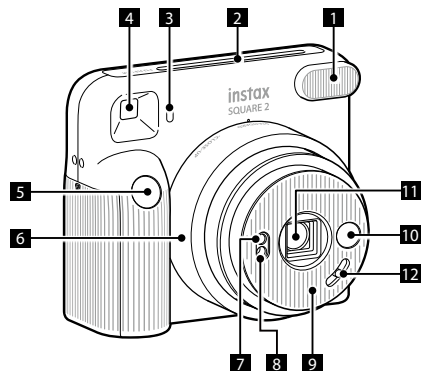

Rear

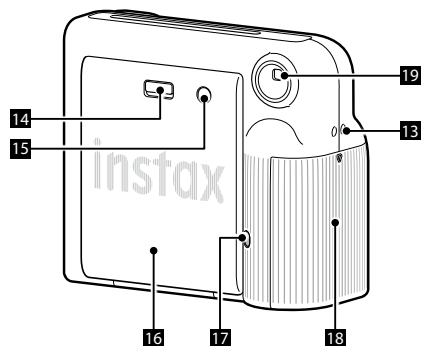 


- 1** Flash
- 2** Film Ejection Slot
- 3** Flash Charging Lamp
- 4** Viewfinder (Front)
- 5** Shutter Button
- 6** Lens Ring
- 7** Auto Exposure Light Sensor
- 8** Flash Light Sensor
- 9** Lens Barrel
- 10** Selfie Mirror
- 11** Lens Cover / Lens
- 12** Mood Filter Switch
- 13** Strap Eyelet
- 14** Film Door Lock
- 15** Film Confirmation Window
- 16** Film Door
- 17** Film Counter
- 18** Battery Cover
- 19** Viewfinder (Back)

Attaching the Strap

Attach the Hand Strap as illustrated below.

 Put the Hand Strap around your wrist when carrying the camera or taking photos to avoid dropping the camera.

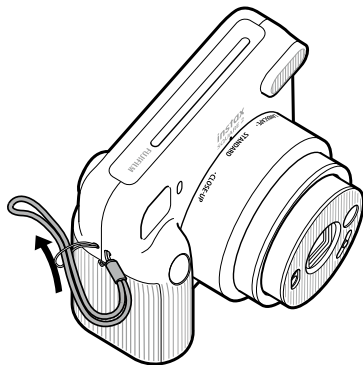


How to Take Photos

Do not open the Film Door until all 10 film sheets of the instax™ SQUARE instant film cartridge (sold separately) have been used. Opening the Film Door will expose any remaining, unused film sheets, rendering the remainder of the film cartridge unusable.

1 Turn on the camera by rotating the Lens Ring.

 - * The Lens Barrel extends. When the Flash Charging Lamp starts flashing and remains lit, you're ready to take a photo.

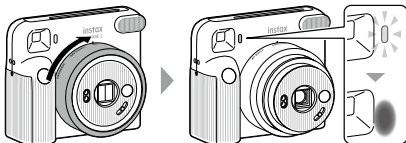


2 Hold the camera and look through the Viewfinder to frame your desired composition, then press the Shutter Button.


- * The Flash Charging Lamp blinks to indicate that the flash is charging. The Shutter Button cannot be pressed while the flash is charging.



 - ### 3
- When the sound of the film being ejected stops, grip the edge of the ejected film and take the film out. The Film Counter decreases in numerical order, counting down from "10" with each photo taken. "0" will be displayed when the film is finished and after the last photo has been taken.

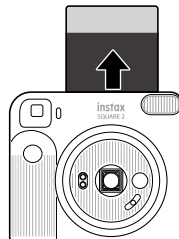

 - ### 4
- When you have finished taking photos, turn off the camera by rotating the Lens Ring to OFF.

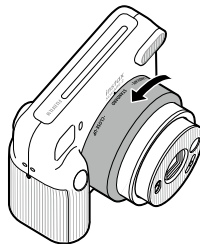


If the camera malfunctions, remove the batteries while the power is on and then reinsert them to reset the camera.

Shooting According to the Distance to the Subject

Taking a Photo in STANDARD Mode


STANDARD mode is suitable for shooting people or indoor scenes. The optimal distance from the subject is 19.7 in. to 9.8 ft (0.5 m to 3.0 m).

 - 1 Rotate the Lens Ring to the "STANDARD" position.

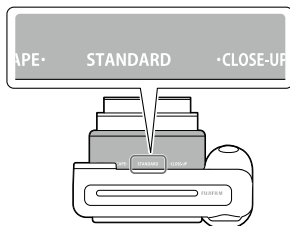

- 2 Hold the camera and look through the Viewfinder to frame your desired composition, then press the Shutter Button.

 
- * The optimal distance from the subject is 19.7 in. to 9.8 ft (0.5 m to 3.0 m).
- * The effective flash range is up to approximately 7.2 ft (2.2 m).

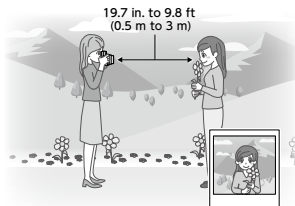

Taking a Photo in LANDSCAPE Mode


LANDSCAPE mode is suitable for shooting distant subjects, such as landscapes. The optimal distance from the subject is 9.8 ft (3.0 m) or more.

 - 1 Rotate the Lens Ring to the "LANDSCAPE" position.

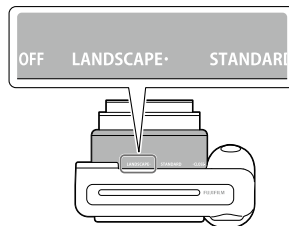

- 2 Hold the camera and look through the Viewfinder to frame your desired composition, then press the Shutter Button.

 - * The optimal distance from the subject is 9.8 ft (3.0 m) or more.
- * The effective flash range is up to approximately 7.2 ft (2.2 m).

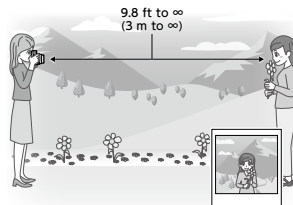


Taking a Photo in CLOSE-UP Mode

CLOSE-UP mode is suitable for close-up shots, such as food or selfies. The optimal distance from the subject is between 11.8 in. to 19.7 in. (0.3 m to 0.5 m).


■ Taking a Close-Up

 - 1 Rotate the Lens Ring to the "CLOSE-UP" position.

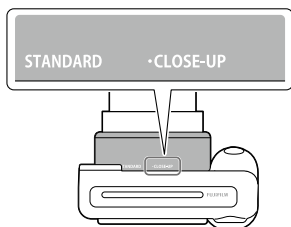

- 2 Hold the camera and look through the Viewfinder to frame your desired composition, then press the Shutter Button.

 
* The optimal distance from the subject is 11.8 in. to 19.7 in. (0.3 m to 0.5 m).

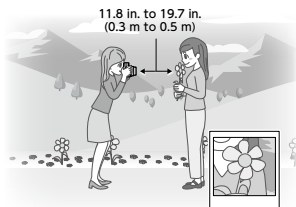


■ Taking a Photo of Yourself

Confirm the composition using the Selfie Mirror at the front of the Lens, then you can take a photo.

 - 1 Rotate the Lens Ring to the "CLOSE-UP" position.
- 2 Hold the camera securely so that your face is 11.8 in. to 19.7 in. (0.3 m to 0.5 m) away from the end of the Lens.

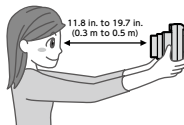

 - 3 Confirm the composition using the Selfie Mirror.

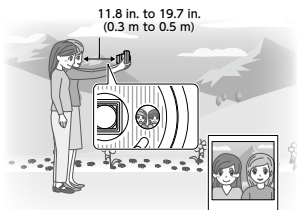


- 4 Press the Shutter Button.

Shooting with a Mood Filter

Operating the switch on the front of the camera applies a filter in front of the Lens, allowing you to alter the color, tone and mood of your photos. You can choose from the 'Cool' and 'Warm' filters.


OFF

 When the switch is in the center position, the filter is off.

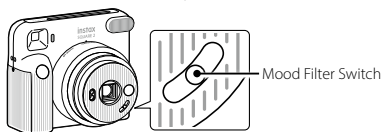


Cool

 Slide the Mood Filter Switch to the bottom-left. The 'Cool' filter is inserted in front of the Lens, and a blue mark appears on the switch.

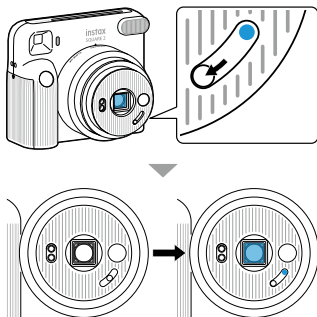

Warm

 Slide the Mood Filter Switch to the top-right. The 'Warm' filter is inserted in front of the Lens, and an orange mark appears on the switch.

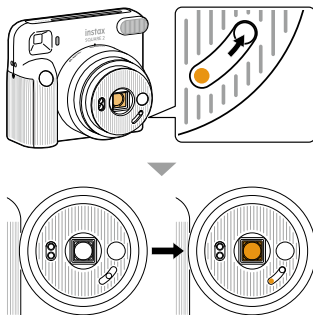

Precautions when Taking Photos

Precautions When Holding the Camera



Correct way to hold the camera



Do not cover the Flash Lamp face with your finger while taking a photo



Do not cover the Flash Light Sensor and AE Light Sensor with your finger

- Make sure that your finger or the strap does not cover the Flash Light Sensor, Auto Exposure Light Sensor, Flash Lamp face, Lens or Film Ejection Slot.
- Hold the camera so that the Flash Lamp face is at the top when taking a horizontal photo.
- Do not take photos using the flash feature in locations where flash photography is prohibited.
- Do not grasp the Lens Barrel when holding the camera. The finished photos may be adversely affected.
- When looking through the Viewfinder, ensure that the  mark is visible in the center of your subject.
- Be careful not to touch the Lens or otherwise obstruct the Lens when you press the Shutter Button.
- **When taking photos in the dark, hold the camera firmly to prevent blurring, as the shutter speed may be slow.**

Lamp Indicators and Error Solutions

Flash Charging Lamp status	Description
Lit	Ready to take a photo.
Off	Camera is off.
Slow flashing	The flash is charging. Please wait until the charging lamp lights.
Repeated slow flashing and quick flashing	The battery voltage is low.
Quick flashing	An error has occurred. • The film is jammed. • Incorrect Lens ring position. • Other error If this continues, contact the applicable Fujifilm Customer Service/Repair Center.

Troubleshooting

Problem	Solution
The battery voltage is low	Replace the batteries with new ones.
Film jammed	Do not pull out the film. Remove the batteries and reinsert new batteries. It may be possible to eject the film after these steps are taken. If this continues, contact a FUJIFILM authorized dealer for assistance.
Incorrect Lens Ring position	Set the Lens Ring in the proper position.
Other	The camera may be malfunctioning. Remove and reinsert the batteries while the power is on.

IMPORTANT SAFETY NOTICE

- Do not use this product and its accessories for a purpose other than taking instant photos.
- This product has been designed with safety in mind, and to provide safe operation when handled correctly and in accordance with the instructions in this User's Guide. It is important that both the product and the instax™ SQUARE instant film cartridge (sold separately) are handled properly and used only to print photos as instructed in this User's Guide and instructions on the packaging of the instax™ SQUARE instant film cartridge (sold separately). For your ease and safety, strictly follow the instructions in this User's Guide.

WARNING

This symbol indicates danger, which could result in product damage, injury or death. Follow the instructions indicated to avoid damage to the camera or injury.

- ⚠ Never attempt to take this product apart. You may be injured.
- ⚠ Do not touch this product if the inside of it becomes exposed due to external damage (for example, being dropped or impacted). This product has high-voltage circuitry that may cause electric shock.
- ⚠ If you notice anything abnormal, such as the camera (batteries) becoming hot, emitting smoke, or making a burning smell, remove the batteries immediately. Fire or burns may occur (be careful not to burn yourself when removing the batteries).
- ⚠ Never take flash photographs of people engaged in activities where the flash may distract or startle them and cause an accident or other potentially dangerous or harmful situation (e.g., riding bicycles, driving cars, skateboarding, or riding a horse). Be cautious of using the flash around animals as the flash may frighten them.
- ⚠ If you drop the camera in water or if water or a piece of metal or other foreign object gets inside, remove the batteries immediately. Heat generation or fire may occur.
- ⚠ Do not use this camera in places where there is flammable gas or near open gasoline, benzene, paint thinner or other unstable substances which can give off dangerous vapors. Failure to do this could result in explosion or fire.
- ⚠ Do not disassemble, heat the batteries, expose the camera or batteries to a fire or to an electrical short circuit. The batteries may rupture.
- ⚠ Use only AA-size alkaline battery (LR6) or AA-size nickel metal hydride battery (HR6). Heat generation or fire may occur if other batteries are used.
- ⚠ Keep batteries out of the reach of infants. An infant may

accidentally swallow a battery. In the event that a battery is swallowed, seek medical attention immediately.

CAUTION

This symbol indicates a matter that may lead to injury or physical damage if ignored or incorrectly handled.

- ⚠ If the camera is not functioning correctly, contact the applicable FUJIFILM customer service or repair center. To avoid injury, do not attempt to repair this product yourself.
- ⚠ Do not touch any parts within the inside of the Film Door. This may cause injury.
- ⚠ Do not handle this product with wet hands. Electric shock may occur.
- ⚠ Keep the product out of the reach of infants and small children. Injury may occur.
- ⚠ Do not cover or wrap the camera in a cloth or blanket. This can cause heat to build up and distort the casing or cause a fire.
- ⚠ Using a flash too close to a person's eyes may for the short term affect their eyesight. Take care when taking photos of infants and young children.
- ⚠ Take care not to make a mistake with the ⊕ and ⊖ polarities when inserting the AA batteries. Damage to surrounding area may occur if the camera is damaged or if battery fluid leaks out.
- ⚠ Do not touch moving parts inside the camera. You may be injured.
- ⚠ For AA batteries, use alkaline or nickel metal hydride batteries. Do not mix alkaline and nickel metal hydride batteries. Do not mix old batteries with new ones.



The "CE" mark certifies that this product satisfies the requirements of the European Union (EU) regarding safety, public health, environment, and consumer protection. ("CE" is the abbreviation of Conformité Européenne.)

- **Legally required regulation compliance displays are located on the inside of the Film Door Cover of the camera.**

Handling

■ Handling of Camera

1. Do not open the Film Door until all 10 film sheets of the instax™ SQUARE instant film cartridge (sold separately) have been used. Opening the Film Door will expose any remaining, unused film sheets, rendering the remainder of the film cartridge unusable.
2. The camera is a precision instrument, so do not get it wet, drop it, or subject it to shock. Also, do not place the camera where it will be exposed to sand, dirt or dust particles.

3. Do not use solvent such as paint thinner or alcohol to wipe off dirt.
4. Any dirt or dust in the film chamber will affect the finish of the print. Do not allow the film chamber to get dirty or dusty.
5. Do not leave the camera in a closed motor vehicle, another hot place, a humid place, on the beach, etc., for a long period of time.
6. Gas containing moth repellent may adversely affect the camera and film. Avoid keeping the camera and film in a chest of drawers, etc., with mothballs.
7. The operating temperature range of this camera is 41°F (+5°C) to 104°F (+40°C).
8. When taking photos, please be careful not to violate the rights of others, such as copyright, image, publicity, or privacy rights, or otherwise violate any laws or public order. Violation of the rights of others or laws may be subject to legal penalties or claims for damages.
9. This camera is for general personal use. It is not suitable for commercial photography and other applications where a large number of prints are used.
10. Use of the provided Hand Strap is recommended. Before using a strap other than the one provided, check the strength of the strap to assure it is strong enough to hold the weight of the camera. Using a strap for mobile phones/smartphones is not recommended due to such straps being intended for lightweight devices.
11. If you are not using your camera for a long period of time, unload the batteries and store them where they will avoid heat, dust and moisture.
12. Remove soil and dust from the Viewfinder window, etc. with an air blower or duster intended for electronics and by wiping gently with a piece of soft cloth.
4. If film has been kept in a place where the temperature is extremely low or high, allow it to become accustomed to a normal temperature before taking pictures.
5. Be sure to use the film before the expiration or "Use Before" date on the instant film package.
6. Avoid airport checked luggage inspection and other strong X-ray exposure. Unused film is susceptible to the effect of fogging, etc. We recommend that you carry film onto aircraft in carry-on luggage (check with the relevant airport for more information).
7. Avoid exposing instant photos to strong light, and store them in a cool and dry place.
8. Do not cut, peel apart or puncture new or newly used instant print film. Film contains a small amount of highly caustic paste; paste can remain active up to 10 minutes after instant photo ejects. **Be especially careful not to let infants or pets put the film into their mouth.** Take care to avoid paste coming into contact with skin or clothes.
9. If you accidentally touch the paste of unused instax™ SQUARE instant print film, immediately wash it off with plenty of water. If the paste comes into contact with the eyes or mouth, wash the area and then seek medical attention. The alkalinity of instax™ SQUARE instant print film will weaken approximately 10 minutes after the instant photo is ejected from the camera.
10. Do not store instant photos in a sealed bag, as this may cause discoloration.
11. Do not touch the film during development time.

■ Cautions During Printing



■ Handling of instax™ SQUARE Instant Film and Photos

For details on the handling of film and photos, see the instructions written on the FUJIFILM instax™ SQUARE instant film packaging (film sold separately).

1. Keep film in a cool place. In particular, do not leave film in an extremely hot place, such as in a closed motor vehicle, for a long period of time.
2. Do not make a hole in the film or tear or cut film. Do not use film that is damaged.
3. Use film as soon as possible after inserting it in the camera.

■ Cautions on Handling of Instant Film and Finished Photos

For details, see the instructions on the FUJIFILM instax™ SQUARE instant film packaging (sold separately).



Specifications

Film Used	FUJIFILM instax™ SQUARE instant film (sold separately)
Image Size	2.4 in. x 2.4 in. (62 mm x 62 mm)
Lens	2 components, 2 elements, $f = 65.75 \text{ mm } 1:12.6$
Viewfinder	Reverse Galileo-style Finder 0.4x, With Target Mark
Shooting Range	11.8 in. (0.3 m) and beyond (CLOSE-UP: 11.8 in. (0.3 m) to 19.7 in. (0.5 m) / STANDARD: 19.7 in. (0.5 m) to 9.8 ft (3.0 m) / LANDSCAPE: 9.8 ft (3.0 m) and beyond)
Shutter	Programmed electronic shutter 1/2 to 1/400 sec. Slow synchro for low light
Exposure Control	Automatic, Lv 5.0 to 15.5 (ISO 800)
Film Ejection	Automatic
Film Developing Time	Approx. 90 seconds (varies depending on the ambient temperature)
Flash	Constant firing flash (automatic light adjustment), recycle time: 7.5 seconds or less (when using new batteries), effective flash range: 11.8 in. (0.3 m) to 7.2 ft (2.2 m)
Power Supply	4 AA-size alkaline batteries (LR6). Capacity: approx. 30 instax™ SQUARE instant film packs of 10 exposures each (300 exposures) per set of new batteries (depends on usage conditions). *The supplied batteries are for initial use. When they run out, replace them with new ones (4 AA-size alkaline batteries [LR6] or 4 AA-size nickel metal hydride batteries [HR6]). *Do not mix alkaline and nickel metal hydride batteries. *Manganese batteries are not compatible.
Auto Power Off Time	After 5 minutes
Other	Includes Film Counter and film pack confirmation window
Dimensions (W x H x D)	5.47 in. x 4.70 in. x 2.80 in. (139.0 mm x 119.5 mm x 71.0 mm)
Weight	0.99 lbs / 450 g (without batteries and instant film loaded, and without Hand Strap attached)

For Customers in the USA:**FCC Statement**

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

For more information, access the website below.

https://instax.com/support/declaration/#analog_cameras

CAUTION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Fujifilm responsible for compliance could void the user's authority to operate the equipment.

PFAS Information

This product contains PFAS.

For Customers in Canada :**CAN ICES (B)/NMB (B)**

This Class B digital apparatus complies with Canadian ICES-003.

Notes on Disposing of the Camera

Proper Disposal – US, Canada and Latin America



Disposal of Electric and Electronic Equipment in Private Households
Disposal of used Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product, the full version of the User's Guide, Quick Start Guide, in the limited product warranty, and/or on its packaging indicates that this product shall not be treated as household waste.

Instead it should be taken to an applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The recycling of materials may help to conserve natural resources.

For more detailed information about recycling of this product, please contact your local city recycling office, your household waste disposal service or the authorized Fujifilm dealer from which you purchased the product.

For proper disposal in the United States at product end-of-life, please contact 1-800-800-3854 Option #1 INSTAX.

For proper disposal in Canada at product-end-of-life, please contact 1-800-461-0416.

For proper disposal in Latin America at product end-of-life, please contact your local FUJIFILM distributor or dealer for disposal instructions.

Information for Fujifilm in the United States

FUJIFILM North America Corporation
200 Summit Lake Drive
Valhalla, New York 10595, USA
1-800-800-3854 Option #1 INSTAX

Information for Fujifilm in Canada

FUJIFILM Canada Incorporated
600 Suffolk Court
Mississauga, Ontario L5R 4G4, Canada
1-800-461-0416

FUJIFILM, *instax* and *instax SQUARE 2* are registered trademarks or trademarks of FUJIFILM Corporation and its affiliates.

© 2026 FUJIFILM Corporation. All rights reserved.

EN If you have any inquiries about this product, please contact the applicable Fujifilm customer service/repair center, or access the website below.

FR Si vous avez des questions sur ce produit, veuillez vous adresser au centre de service à la clientèle/de réparation Fujifilm approprié ou consulter le site web ci-dessous.

ES Si tiene alguna pregunta sobre este producto, por favor póngase en contacto con el correspondiente Centro de servicio al cliente/reparación de Fujifilm, o acceda al sitio web a continuación.

<https://global.fujifilm.com/>

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN