

FUJIFILM
instax SQUARE 2™
INSTANT CAMERA



 
User's Guide/Safety Precautions

Note when handling the instax™ SQUARE instant film cartridge


EN Do not open the film door until you have used up all of the film; otherwise, the rest of the film is exposed and turns white. The film can no longer be used.



1

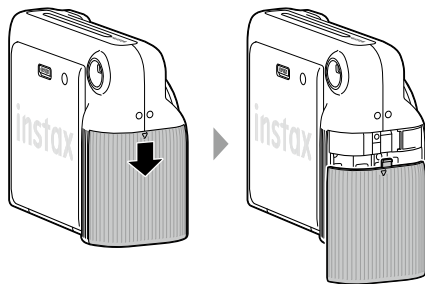



2

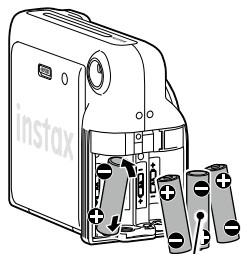 



4 AA-size alkaline batteries (LR6) or
4 AA-size nickel metal hydride batteries (HR6)

  3

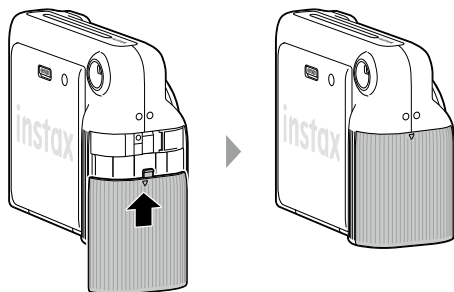


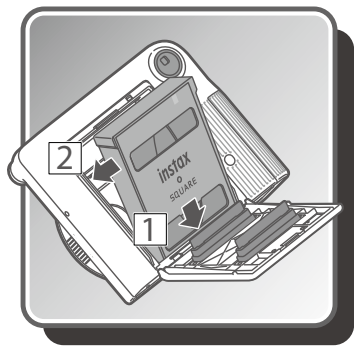


1

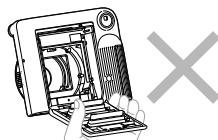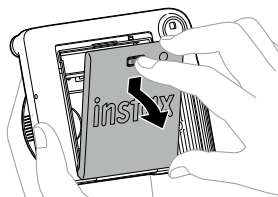  

2

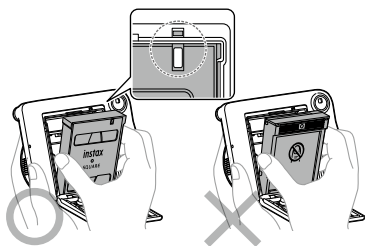 


3

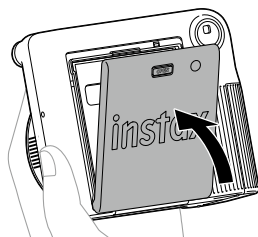 





1

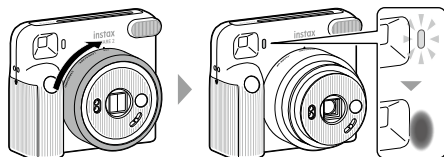 


2

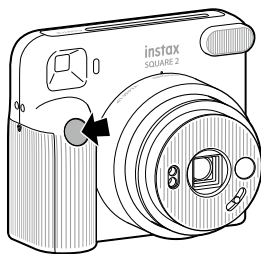 


3

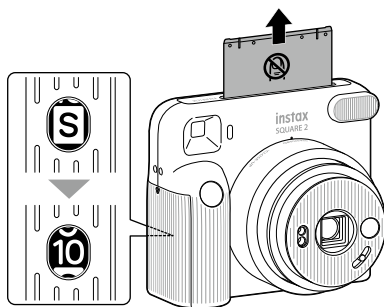 


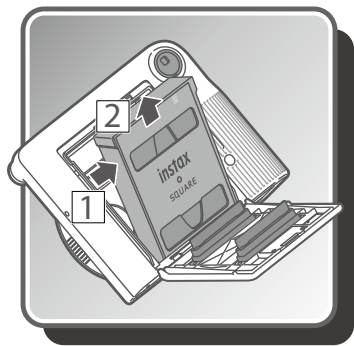 


1

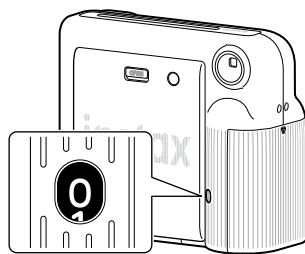 

2

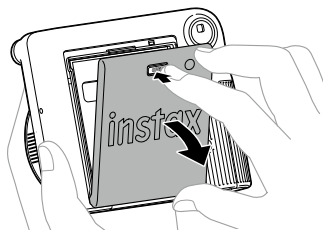 

3

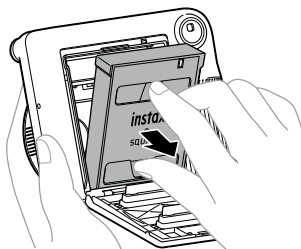 

Before Use

 
Before using the camera, check you have the followings:

Supplied Accessories


- Hand Strap (1)
- AA-size alkaline batteries (LR6) (4)
- User's Guide (1)

Part Names

Front

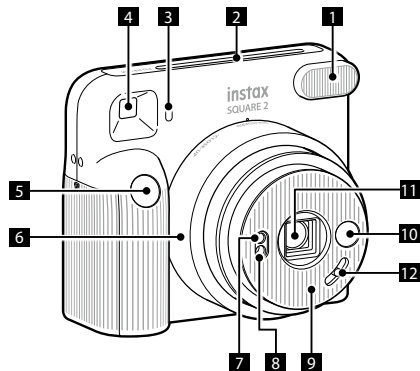

Rear

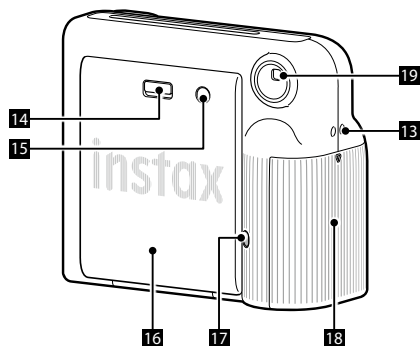 


- 1** Flash
- 2** Film Ejection Slot
- 3** Flash Charging Lamp
- 4** Viewfinder (Front)
- 5** Shutter Button
- 6** Lens Ring
- 7** Auto Exposure Light Sensor
- 8** Flash Light Sensor
- 9** Lens Barrel
- 10** Selfie Mirror
- 11** Lens Cover / Lens
- 12** Mood Filter Switch
- 13** Strap Eyelet
- 14** Film Door Lock
- 15** Film Confirmation Window
- 16** Film Door
- 17** Film Counter
- 18** Battery Cover
- 19** Viewfinder (Back)

● Learn how to insert/remove batteries and instax™ SQUARE film cartridges on pages 3 to 6.

Attaching the Strap

Attach the Hand strap as illustrated below.

 Put the Hand strap around your wrist when carrying the camera or taking photos to avoid dropping the camera.

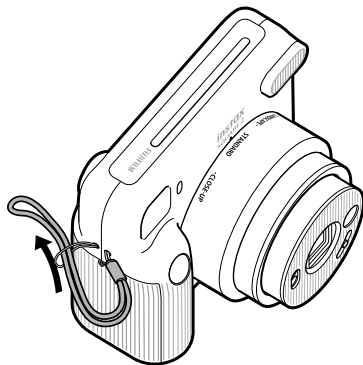


How to Take Photos

Do not open the Film Door until you have used up all the film. Otherwise, the rest of the film will become exposed and turn white, and can no longer be used.


1 Turn on the camera by rotating the lens ring.

 - * The lens barrel extends. When the flash charging lamp stops flashing and remains lit, you're ready to take a photo.

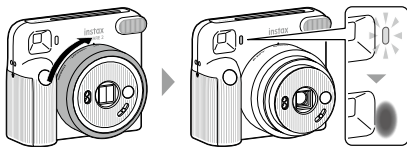


2 Hold the camera and look through the Viewfinder to frame your desired composition, then press the Shutter Button.

 
- * The flash charging lamp blinks to indicate that the flash is charging. The shutter button cannot be pressed while the flash is charging.

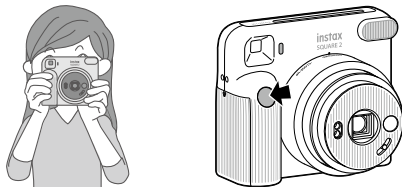

 3 When the sound of the film being ejected stops, grip the edge of the ejected film and take the film out. The film counter decreases in numerical order, counting down from "10" with each photo taken. "0" will be displayed when the film is finished and after the last photo has been taken.

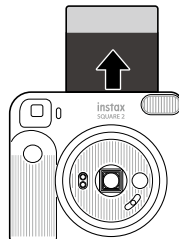

 4 When you have finished taking photos, turn off the camera by rotating the Lens Ring to OFF.

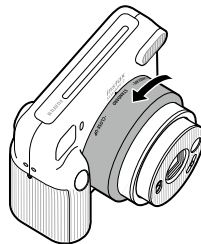


If the camera malfunctions, remove the batteries while the power is on and then reinsert them to reset the camera.

Shooting According to the Distance to the Subject

Taking a Photo in STANDARD mode


STANDARD mode is suitable for shooting people or indoor scenes. The optimal distance from the subject is 0.5 m to 3 m.

 - 1 Rotate the lens ring to the "STANDARD" position.

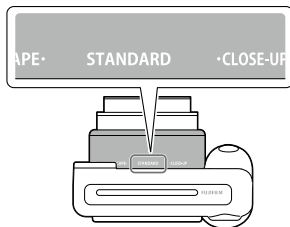

- 2 Hold the camera and look through the Viewfinder to frame your desired composition, then press the Shutter Button.

 
- * The optimal distance from the subject is 0.5 m to 3 m.
- * The effective flash range is up to approximately 2.2 m.

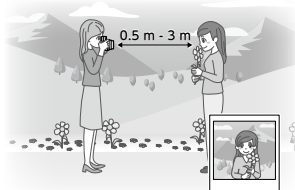

Taking a Photo in LANDSCAPE mode


LANDSCAPE mode is suitable for shooting distant subjects, such as landscapes. The optimal distance from the subject is 3 m or more.

 - 1 Rotate the lens ring to the "LANDSCAPE" position.

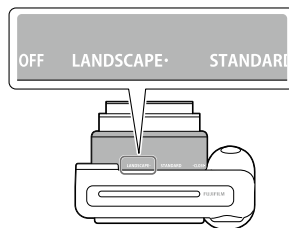

- 2 Hold the camera and look through the Viewfinder to frame your desired composition, then press the Shutter Button.

 - * The optimal distance from the subject is 3 m or more.
- * The effective flash range is up to approximately 2.2 m.

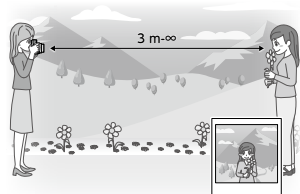


Taking a Photo in CLOSE-UP mode

CLOSE-UP mode suitable for close-up shots, such as food or selfies. The optimal distance from the subject between 0.3 m to 0.5 m.


■ Taking a Close-up

 - 1 Rotate the lens ring to the "CLOSE-UP" position.

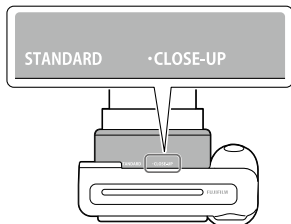

- 2 Hold the camera and look through the Viewfinder to frame your desired composition, then press the Shutter Button.

 
* The optimal distance from the subject is 0.3 m to 0.5 m.

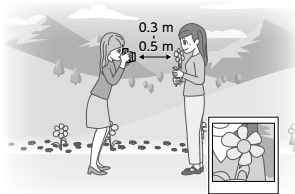


■ Taking a Photo of Yourself

Confirm the composition using the selfie mirror at the front of the lens, then you can take a photo.

 - 1 Rotate the lens ring to the "CLOSE-UP" position.
- 2 Hold the camera securely so that your face is 0.3 m to 0.5 m away from the end of the lens.

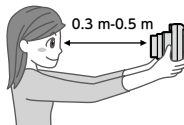

 - 3 Confirm the composition using the selfie mirror.

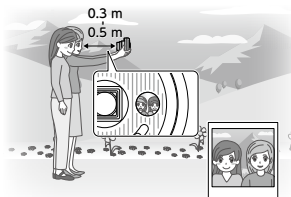


- 4 Press the Shutter Button.

Shooting with a Mood Filter

Operating the switch on the front of the camera inserts a filter in front of the lens, allowing you to alter the color tone and atmosphere of your photos. You can choose from the 'Cool' and 'Warm' filters.


OFF

 When the switch is in the center position, the filter is off.

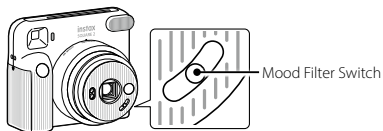


Cool

 Slide the Mood Filter Switch to the bottom-left. The "Cool" filter is inserted in front of the lens, and a blue mark appears on the switch.

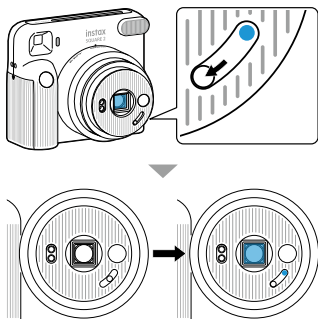

Warm

 Slide the Mood Filter Switch to the top-right. The "Warm" filter is inserted in front of the lens, and an orange mark appears on the switch.

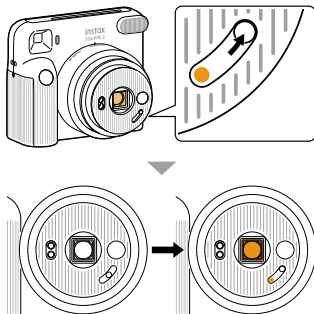

Precautions When Taking Photos

Precautions When Holding the Camera



Correct way to hold the camera



Do not cover the flash with your fingers



Do not cover the Flash Light Sensor and Auto Exposure Light Sensor with your fingers

- Take care that your fingers and the strap do not cover the Flash Light Sensor, Auto Exposure Light Sensor, Flash, Lens, or Film Ejection Slot.
- Hold the camera so that the flash is at the top when taking a horizontal picture.
- Do not take photos in locations where flash photography is forbidden.
- Do not grip the lens barrel when holding the camera. The finished photos may be adversely affected.
- Look into the viewfinder so that the  mark in the viewfinder is centered on your subject.
- Be careful not to touch the lens when you press the shutter button.
- **When taking photos in the dark, hold the camera firmly to prevent blurring, as the shutter speed may be slow.**

Lamp Indicators and Troubleshooting

Flash Charging Lamp status	Description
Lit	Ready to take a photo
Off	Camera is off.
Slow flashing	The flash is charging. Please wait until the charging lamp light stops flashing, and the light is on.
Repeated slow flashing and quick flashing	The battery voltage is low.
Quick flashing	An error has occurred. • The film is jammed. • Incorrect lens ring position • Other error
Problem	Solution
The battery voltage is low	Replace the batteries with new ones.
Film jammed	Do not forcibly pull out the film. Remove the batteries, and reinsert new batteries. It may then be possible to eject the film.
Incorrect lens ring position	Set the lens ring in the proper position.
Other	The camera may be malfunctioning. Remove and reinsert the batteries while the power is on.

IMPORTANT SAFETY NOTICE

- Do not use this product and its accessories for a purpose other than taking photos.
- This product has been designed with safety in mind, but please read the following safety precautions carefully and then use the product correctly.

WARNING

This symbol indicates danger, which could result in injury or death. Please follow these instructions.

-  Never attempt to take this product apart. You may be injured.
-  Do not touch this product if the inside of it becomes exposed due to dropping, etc. This product has high voltage circuitry that may cause electric shock.
-  Do not handle this product with wet hands. Electric shock may occur.
-  If you notice anything abnormal, such as the camera (batteries) becoming hot, emitting smoke, or making a burning smell, remove the batteries immediately. Fire or burns may occur (be careful not to burn yourself when removing the batteries).
-  Never take flash photographs of people riding bicycles, driving cars, skateboarding, riding a horse and the like. The flash can be startling, distracting and can frighten animals. This could potentially cause an accident.
-  If the camera comes into contact with water, or if water, metal, or any foreign object enters the device, remove the batteries immediately to prevent the risk of overheating or fire.
-  Do not use this camera in places where there is flammable gas or near open gasoline, benzene, paint thinner or other unstable substances which can give off dangerous vapors. Failure to do this could result in explosion or fire.
-  Keep the product out of the reach of infants and small children. Injury may occur.
-  Do not disassemble, heat the batteries, throw them in a fire, or put them in an electrical short circuit. The batteries may rupture.
-  Use only AA-size alkaline battery (LR6) or AA-size nickel metal hydride battery (HR6). Heat generation or fire may occur if other batteries are used.
-  Keep batteries out of the reach of infants. An infant may accidentally swallow a battery. In the event that a battery is swallowed, seek medical attention immediately.

CAUTION

This symbol indicates a matter that may lead to injury or physical damage if ignored or incorrectly handled.

-  If anything is wrong with the camera, never attempt to repair it by yourself. You may be injured.
-  Do not touch any parts inside of the Film Door. This may cause injury.
-  Do not cover or wrap the camera in a cloth or blanket. This can cause heat to build up and distort the casing or cause a fire.
-  Using a flash too close to a person's eyes may for the short term affect their eyesight. Take care when taking pictures of infants and young children.
-  Take care not to make a mistake with the ⊕ and ⊖ polarities when inserting the AA batteries. Damages to the surroundings may occur due to the camera being damaged or its battery fluid leaking out.
-  Do not touch moving parts inside the camera. You may be injured.
-  For AA batteries, use alkaline or nickel metal hydride batteries. Do not mix alkaline and nickel metal hydride batteries. Do not mix old batteries with new ones.

	The "CE" mark certifies that this product satisfies the requirements of the European Union (EU) regarding safety, public health, environment, and consumer protection. ("CE" is the abbreviation of Conformité Européenne.)
	The "UKCA" mark certifies that this product satisfies the requirements of Great Britain (England, Scotland, Wales) regarding safety, public health, environment and consumer protection. *UKCA: UK Conformity Assessed.

- **Legally required regulation compliance displays are located on the inside of the Film Door Cover of the camera.**

Handling

- **Cautions when handling the camera**

- 1. Do not open the film door until you have used up all of the film; otherwise, the rest of the film is exposed and turns white. The film can no longer be used.**
- The camera is a precision instrument, so do not get it wet, drop it, or subject it to shock. Also, do not place the camera where it will be exposed to sand or grit.
- Do not use solvent such as paint thinner or alcohol to wipe off dirt.

- Any dirt or dust in the film chamber will affect the finish of the print. Do not allow the film chamber to get dirty or dusty.
- Avoid leaving the camera for any length of time in a closed car, hot or humid environments, on the beach, or similar conditions.
- Gas from moth repellents can damage both the camera and film. Avoid storing them in drawers or enclosed spaces with mothballs.
- The operating temperature range of this camera is +5°C to +40°C.
- When taking photos, please be careful not to violate the rights of others, such as copyright, image rights, and privacy, or violate public order. Any act that violates the rights of others, or is contrary to public order or morals, or constitutes a nuisance, is subject to legal penalties and claims for damages.
- This camera is for general household use. It is not suitable for commercial photography and other applications where a large number of prints are used.
- Before using a commercially available strap, check the strength of the strap. Be especially careful when using a strap for mobile phones and smartphones because such straps are made for lightweight devices.
- If you are not using your camera for a long period, take out the batteries and store them where they will avoid heat, dust and moisture.
- Remove soil and dust from the viewfinder window, etc. with an air blower and by wiping gently with a piece of soft cloth.

■ Cautions when printing



■ Handling instax™ SQUARE Film and Photos

For details on the handling of film and photos, see the instructions written on the FUJIFILM instax™ SQUARE Instant film packaging.

- Keep film in a cool place. In particular, do not leave film in an extremely hot place, such as in a closed motor vehicle, for a long period of time.
- Do not make a hole in the film or tear or cut film. Do not use film that is damaged.
- Use film as soon as possible after inserting it in the camera.
- If film has been kept in a place where the temperature is extremely low or high, allow it to become accustomed to a normal temperature before taking pictures.
- Use film before the film expiration date referenced on the packaging.
- Avoid airport checked luggage inspection and other strong

X-ray exposure. Unused film is susceptible to the effect of fogging, etc. We recommend that you carry film onto aircraft in carry-on luggage (check with the relevant airport for more information).

- Avoid exposing photos to strong light, and store them in a cool and dry place.
- Do not cut or disassemble the instax™ SQUARE film as it contains black caustic alkali paste. Be especially careful not to let infants or pets put the film into their mouths. Also take care that the paste does not come into contact with skin and clothes.
- If you accidentally touch the paste of unused film, immediately wash it off with plenty of water. If the paste comes into contact with the eyes or mouth, wash the area and then seek medical attention. The alkalinity of this film will weaken approximately 10 minutes after the photo is ejected from the camera.
- Do not store photos in a sealed bag, as this may cause discoloration.
- Do not touch the film during development.

■ Cautions when handling film

For details, see the instructions on the FUJIFILM instax™ SQUARE Instant Film packaging.



Specifications

Film used	FUJIFILM instax™ SQUARE Instant Film (sold separately)
Image Size	62 mm × 62 mm
Lens	2 components, 2 elements, f = 65.75 mm, 1:12.6
Viewfinder	Reverse Galilean finder, 0.4x, with target spot
Shooting Range	0.3 m and beyond (CLOSE-UP: 0.3 m to 0.5 m / STANDARD: 0.5 m to 3.0 m / LANDSCAPE: 3.0 m and beyond)
Shutter	Programmed electronic shutter 1/2 to 1/400 sec. Slow synchro for low light
Exposure Control	Automatic, Lv 5.0 to 15.5 (ISO 800)
Film Ejection	Automatic
Film Developing Time	Approx. 90 seconds (varies depending on the ambient temperature)
Flash	Constant firing flash (automatic light adjustment), recycle time: 7.5 seconds or less (when using new batteries), effective flash range: 0.3 to 2.2 m
Power Supply	4 AA-size alkaline batteries (LR6), capacity: approx. 30 instax™ SQUARE instant film packs of 10 exposures each per set of new batteries (depends on usage conditions) *The supplied batteries are for initial use. When they run out, replace them with new ones (4 AA-size alkaline batteries [LR6] or 4 AA-size nickel metal hydride batteries [HR6]). *Do not mix alkaline and nickel metal hydride batteries. *Manganese batteries cannot be used.
Auto Power Off Time	After 5 minutes
Other	Includes film counter and film pack confirmation window
Dimensions (W × H × D)	139.0 mm × 119.5 mm × 71.0 mm
Weight	450 g (without batteries, instax™ SQUARE film loaded, and strap attached)

Notes on Disposing the Camera



Disposal of Electrical and Electronic Equipment in Private Households
Disposal of used Electrical & Electronic Equipment
(Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product, in the manual and in the warranty, and/or on its packaging indicates that this product should not be treated as household waste. Instead it should be taken to an appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

In countries outside of the EU: If you wish to discard this product, please contact your local authorities and ask for the correct way of disposal.



This symbol on the batteries or accumulators indicates that those batteries should not be treated as Household waste.

For customers in Turkey:

EEE Complies with Directive.

Information for traceability in Europe

Manufacturer: FUJIFILM Corporation
7-3, Akasaka 9-Chome, Minato-ku, Tokyo
Japan

Authorized representative in Europe:
FUJIFILM Europe GmbH
Balcke-Duerr-Allee 6, 40882 Ratingen
Germany

EU Importer: FUJIFILM Europe B.V.
Oudenstaart 1, 5047 TK Tilburg
The Netherlands

product.safety.eu@fujifilm.com
UK Importer: FUJIFILM UK Ltd.
Fujifilm House, Whitbread Way,
Bedford, Bedfordshire, MK42 0ZE
UK

FUJIFILM, instax and instax SQUARE 2 are registered trademarks or trademarks of FUJIFILM Corporation and its affiliates.

© 2026 FUJIFILM Corporation. All rights reserved.

EN If you have any inquiries about this product, please contact a FUJIFILM authorized distributor or dealer, or access the website below.

DE Wenn Sie Fragen zu diesem Produkt haben, wenden Sie sich bitte an einen von FUJIFILM autorisierten Händler oder Vertriebspartner oder besuchen Sie die untenstehende Website.

FR Si vous avez des questions concernant ce produit, veuillez contacter un distributeur ou un revendeur FUJIFILM agréé ou visitez le site Internet suivant.

ES Si tiene alguna pregunta sobre este producto, póngase en contacto con un vendedor o un distribuidor de FUJIFILM autorizados o acceda al sitio web siguiente.

ZHT 如果您對本產品有任何疑問，請參閱隨附的服務卡上的詳情，或訪問以下網站。

KO 이 제품에 대해 문의가 있을 때에는, 동봉된 서비스 카드를 참조하시거나 아래의 웹사이트를 방문하여 주십시오.

PT Caso tenha alguma questão acerca deste produto, por favor, contacte um distribuidor ou revendedor autorizado FUJIFILM, ou acesse ao website abaixo.

RU Если у Вас есть любые вопросы относительно этого изделия, обратитесь к авторизованному дистрибьютору или дилеру FUJIFILM, либо посетите следующий веб-сайт.

IT In caso di domande relative al prodotto, contattare un rivenditore o un distributore autorizzato FUJIFILM o accedere al sito web riportato di seguito.

NL Als u vragen heeft over dit product, neem dan contact op met een geautoriseerde FUJIFILM-distributeur of -dealer, of ga naar onderstaande website.

PL Jeśli masz jakieś pytania dotyczące tego produktu, skontaktuj się z autoryzowanym dystrybutorem lub sprzedawcą FUJIFILM, albo odwiedź witrynę internetową podaną poniżej.

CS Máte-li jakékoli dotazy týkající se tohoto výrobku, obraťte se prosím na oprávněného distributora či prodejce společnosti FUJIFILM nebo navštivte níže uvedené webové stránky.

SK Ak máte akékoľvek otázky týkajúce sa tohto výrobku, kontaktujte autorizovaného distribútora alebo predajcu výrobkov od spoločnosti FUJIFILM, alebo si pozrite nižšie uvedenú webovú stránku.

HU A termékkel kapcsolatos bármely kérdésével kérjük, keresse fel a FUJIFILM egyik hivatalos forgalmazóját vagy kereskedőjét, vagy látogasson el az alábbi weboldalra.

UK Якщо маєте якісь запитання щодо цього виробу, будь ласка, зверніться до повноваженого представника чи дилера FUJIFILM або завітайте на сайт, указаний далі.

NO Hvis du har spørsmål om dette produktet, vennligst ta kontakt med en autorisert FUJIFILM-distributør, eller gå til nettsiden nedenfor.

<https://global.fujifilm.com/>

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN