

FUJIFILM

instax Link WIDE

Smartphone Printer

User's Guide (Full version)



Table of Contents

Before Use.....	3
Notes on Disposing of the Printer	3
Part Names.....	3
Attaching the Strap	4
Mounting on the Stand	4
Installing the App	4
Charging the Battery	4
Loading/Unloading the “instax WIDE” Film Pack.....	5
Turning the Printer on/off	6
Printer Status – LED Light Indicator	6
Connecting and Printing.....	6
When Connecting to the Printer for the First Time	6
When the Printer and Smartphone are Already Connected.....	9
Specifications	10
Troubleshooting	10
IMPORTANT SAFETY NOTICE	11
Simple Printer Care.....	12
Bluetooth® Devices: Cautions.....	13

Independent JPEG Group (IJG) Licenses

This software is based in part on the work of the Independent JPEG Group.


© 2021 FUJIFILM Corporation. All rights reserved.

Before Use

Before using the printer, check the following has been included with your printer.

Supplied Accessories

- Micro USB cable for charging (1)
- User's Guide (1)
- Stand (1)
- Strap (1)



(BOD700)

- ❗ The battery has not been fully charged at the factory, be sure to charge the battery before using the printer.

Notes on Disposing of the Printer

A built-in lithium ion battery is used within this printer.

When you dispose of the printer, follow your local regulations and dispose of it correctly.

Please refer to the supplied CONTACT INFORMATION sheet for more information.

If your country or region is not included in the sheet, please contact your local distributor.

CAUTION

Do not remove the built-in battery by yourself; this may cause you injury.



Disposal of Electric and Electronic Equipment in Private Households
Disposal of used Electrical & Electronic Equipment
(Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product, or in the manual and in the warranty, and/or on its packaging indicates that this product should not be treated as household waste. Instead it should be taken to an appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The recycling of materials will help to conserve natural resources. For more detailed information about the recycling of this product, please contact your local city office, your household waste disposal service or the shop where you have purchased the product.

In countries outside of EU: If you wish to discard this product, please contact your local authorities for more information on the correct method of disposal.



This Symbol on the batteries or accumulators indicates that the batteries should not be treated as Household waste.

For customers in Turkey:


EEE Complies with Directive.

Read "IMPORTANT SAFETY NOTICE" (p. 11) for safety use.


Part Names

- ❗ When using the printer for the first time, ensure that the battery is fully charged.

Front

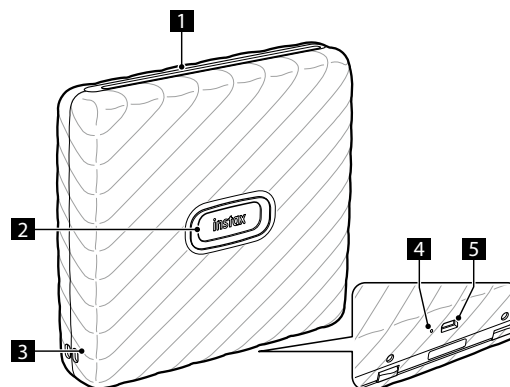

Rear

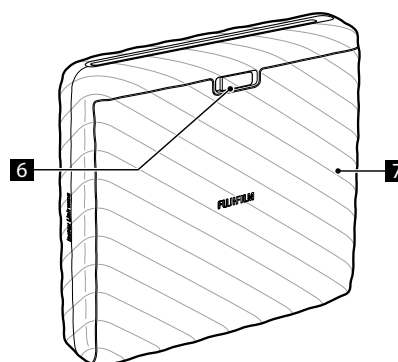

- ❶ Film eject slot
- ❷ Power button/LED*1
- ❸ Strap holes
- ❹ Reset button*2
- ❺ Micro USB port
- ❻ Film door lock
- ❼ Film door


*1 For details on the LED indication status, see pages 4 and 6.

*2 If the printer does not work properly, press the reset button to reset the printer.

Attaching the Strap

Attach the strap as illustrated below.

❗ Be careful that the strap does not obstruct the film ejection slot.

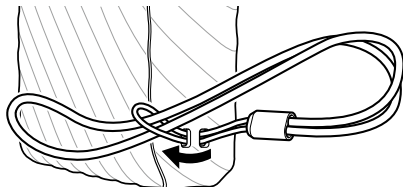

Mounting on the Stand

The printer can be mounted on the stand. When using the stand with the printer, be sure that the film ejection slot is at the top.



Installing the App

Please install the Link WIDE Smartphone App before using the printer.

- If you are using an Android OS smartphone, please search for the Link WIDE Smartphone App in Google Play Store and install it.

*Requirements for Android OS smartphones: Android Ver. 5.0 or higher with Google Play Store installed

- If you are using an iOS smartphone, please search for the Link WIDE Smartphone App in the App Store and install it.

*Requirements for iOS smartphones: iOS Ver. 10.0 or higher

- Even if you have downloaded the app and your smartphone meets the above requirements, you may not be able to use the Link WIDE Smartphone App. This is dependent upon your smartphone model.

Access the Android or iOS app store site for the latest information on system requirements for downloading the Link WIDE App.




iOS



Android OS

Charging the Battery

❗ Ensure the Micro USB is correctly attached as indicated.

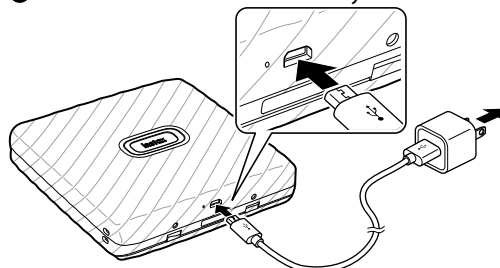

Connect the printer using the supplied Micro USB cable to a USB AC adapter (supplied with your smartphone) then connect the USB AC adapter to an indoor power supply.

- You can print an image while charging is in progress.
- Charging time is approximately 80 to 120 minutes.

LED charging status indicator

Check the charging status with your smartphone when connected to the app.

Indication	Charging status
LED lights up in white	Not charging
LED flashes in white	Charging

* When the printer is turned off, the LED goes off after the charging is completed. When the printer is turned on and not connected with the app, the LED lights up in white after the charging is completed.

Charging from a PC:

- Connect the printer and PC directly. Do not connect via a USB hub or keyboard.
- If the PC goes into sleep mode while charging, charging is discontinued. To continue charging, exit sleep mode and then reconnect the Micro USB cable.
- The battery may not be able to charge depending on the specifications, settings or conditions of the PC.

Notes

- The battery has not been fully charged at the factory, be sure to charge the battery before using the printer.
- The battery cannot be removed.
- For notes about the battery care and usage, see "Simple Printer Care". (p.12)

Loading/Unloading the “instax WIDE” Film Pack

Caution

Do not open the film door until you have used up the film; otherwise, the rest of the film will become exposed and turn white. The film can no longer be used.

- When you load the film pack, never press the two rectangular holes on the back of the film pack.
- Never use a film pack beyond its shelf life; otherwise, it may damage the printer.


Use FUJIFILM instax WIDE Instant Film only. The instax SQUARE film or instax mini film cannot be used.

Notes on the film pack


- Each FUJIFILM instax WIDE film pack contains one black film protective cover and 10 film sheets.
- Do not remove the film pack from its inner foil packaging until you are ready to load the film into the printer.
- The film cover is ejected automatically when the film door is closed.

For further details, refer to the instructions and warnings on FUJIFILM instax WIDE Instant Film.

3 Close the film door.

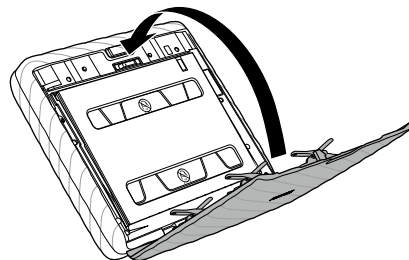


4 A black film cover will automatically be ejected, remove and dispose.

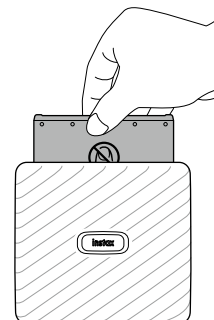


Loading the Film Pack

1 Slide and hold the film door lock down, then open the film door.

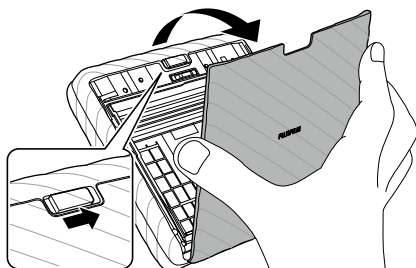


2 Insert film pack by aligning the yellow marks on the film pack and body of the printer.

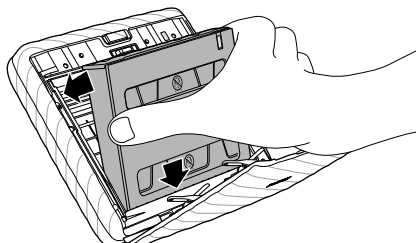


Unloading a Used Film Pack


1 Slide and hold the film door lock, then open the film door.

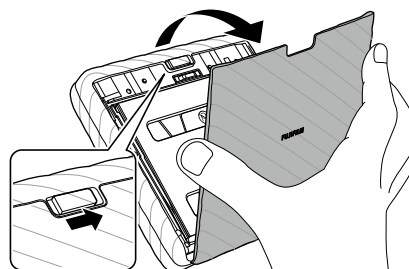

2 Grasp the rectangular holes on the film pack and remove the empty film cartridge.

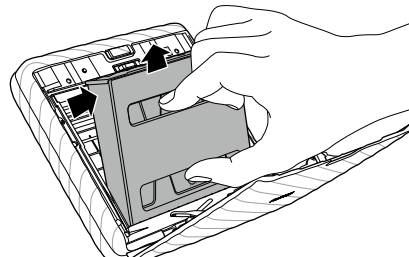

Turning the Printer on/off

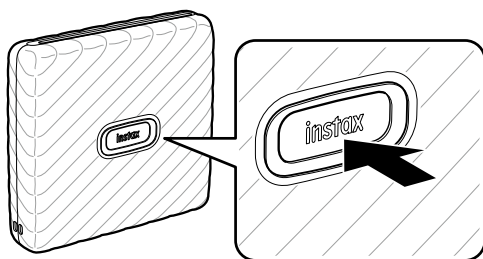

- Press and hold the Power button for approximately 1 second to turn the printer on or off.
- The LED lights up when the printer is turned on.
- The printer turns off automatically when not in use for a certain period of time.

Printer Status – LED Light Indicator

The LED light indicates the printer status.


Indication	Status
LED flashes in blue	Firmware is being updated
LED lights up in yellow	Cannot be charged Film ejection error occurred
LED flashes in yellow	Attempted to print images when the film door is open Low battery

Connecting and Printing


You can enjoy creating various prints such as adding text and applying filters to images with the functions of the Link WIDE App. For details on how to use the App, refer to the following site.
https://instax.com/link_wide/

When Connecting to the Printer for the First Time


- 1 Press and hold the Power button for approximately 1 second to turn the printer on.**
The LED lights up.

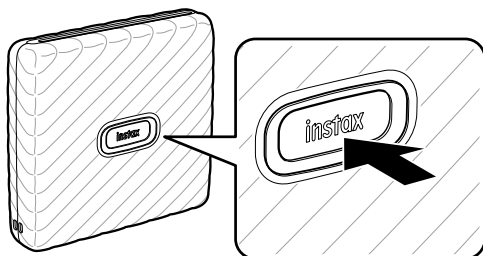


- 2 Open the "Link WIDE" app.**

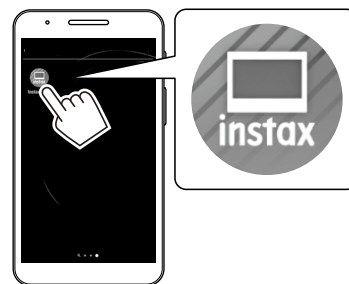


- 3 Set up for accessing to the printer.**

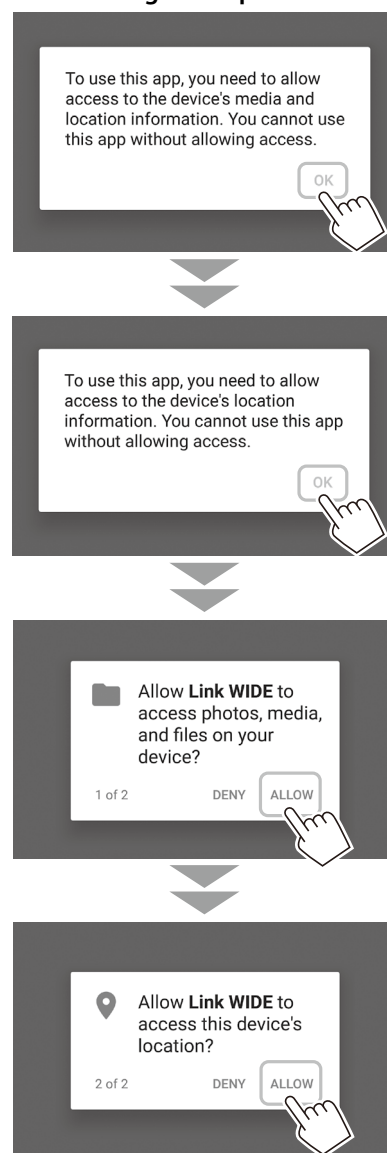


4 Read the terms of use, then put a checkmark in the [Agree] box, and tap [Agree →].

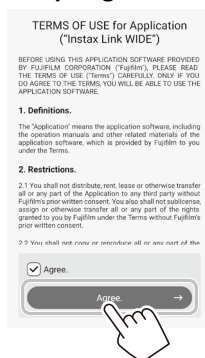


5 Quick instructions are displayed. Read the instructions and tap [Let's Play! →].

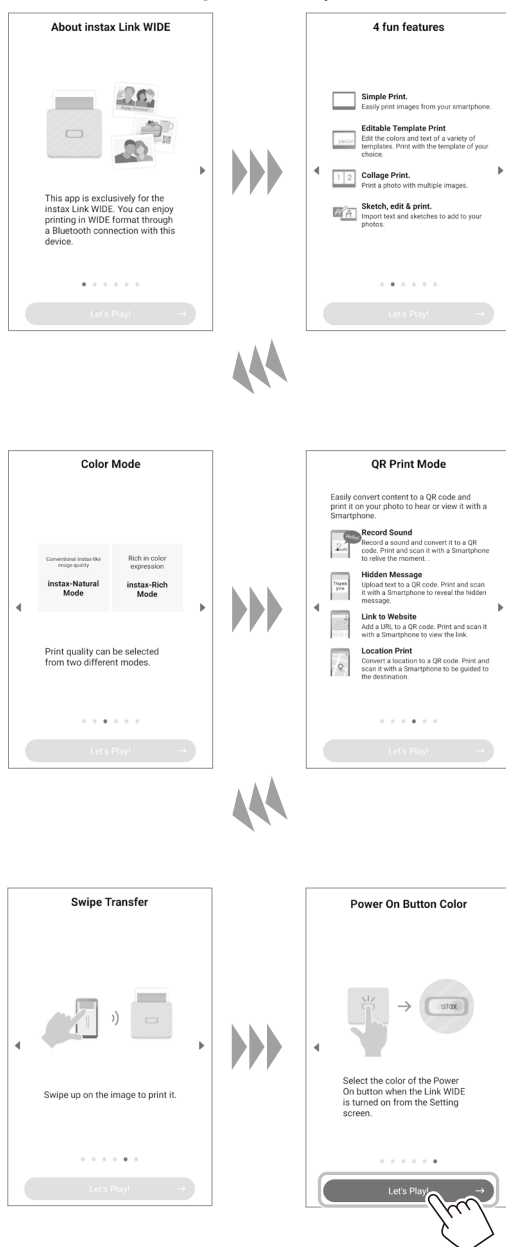

6 Tap [Set]. [Bluetooth connection] can also be set in the process of printing.

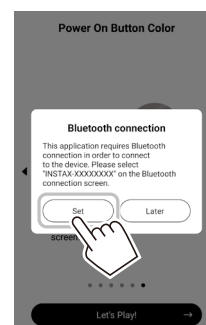


7 When a printer is detected, tap [Connect]. If multiple printers are detected, select the printer to connect from the list. The printers identifier (device name) is located on the bottom of the printer.

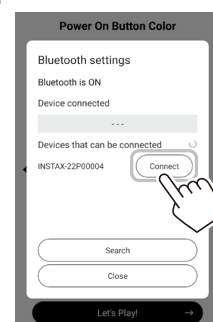


Note

If your Bluetooth settings are switched off, the following screen appears.


Tapping [Please turn on Bluetooth] opens the Bluetooth settings screen. Put the Bluetooth settings on.

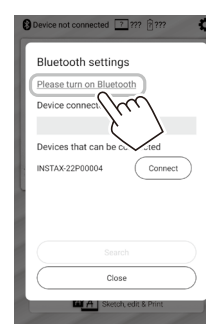


- 8** When the message is displayed, put a checkmark in the check box and tap [PAIR].

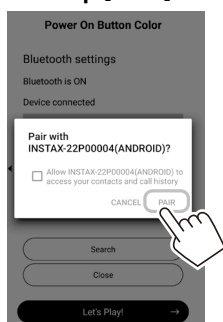

- 9** When a printer is connected, tap [Close].

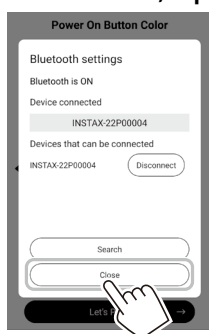

- 10** Select an image that you wish to print.

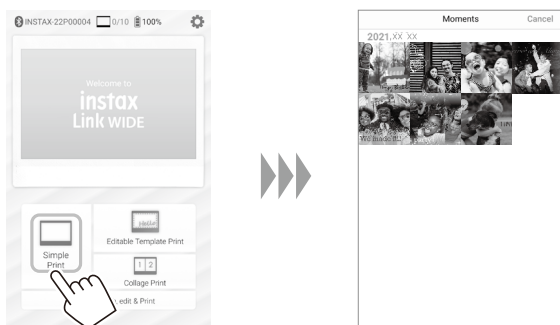

- 11** Tap or swipe up on the screen.


The printer starts printing.

You can also select the number of copies to print during image transfer.



- 12** When the film has been ejected (the printer stops making a sound), hold the edge of the film and remove from the printer.

You can view the number of prints remaining on the app.

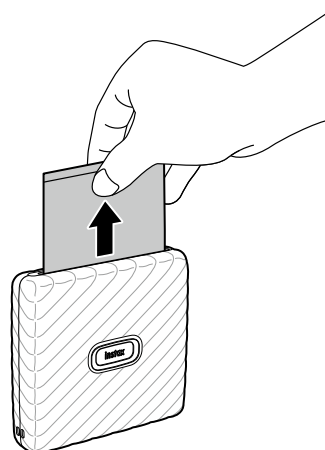


To edit images

The following image editing options are available before printing.


	Enters text on images.
	Zooms up/down or rotates images.
	Applies a filter on images.
	Adjusts the brightness of images.

When the Printer and Smartphone are Already Connected


- 1 Press and hold the Power button for approximately 1 second to turn the printer on.
The LED lights up.

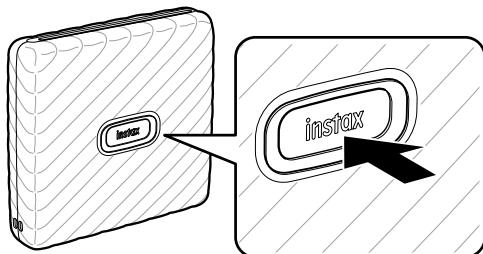

- 2 Open the "Link WIDE" app.

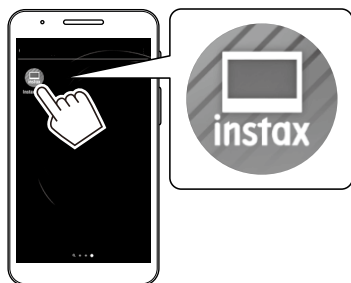


- 3 Select an image that you wish to print.

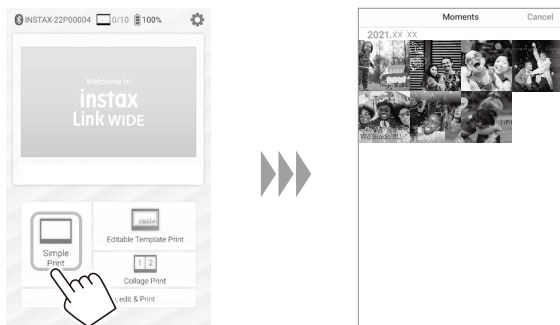

- 4 Tap  or swipe up on the screen.


The printer starts printing.

You can also select the number of copies to print during image transfer.

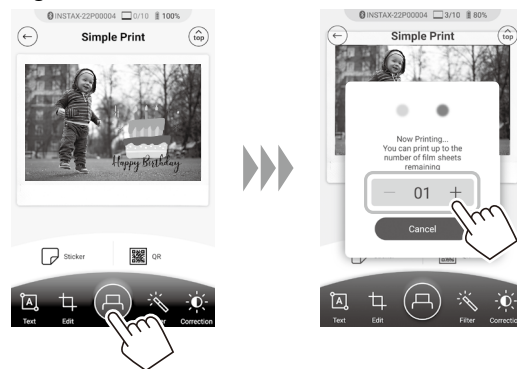

- 5 When the film has been ejected (the printer stops making a sound), hold the edge of the film and remove from the printer.

You can view the number of prints remaining on the app.

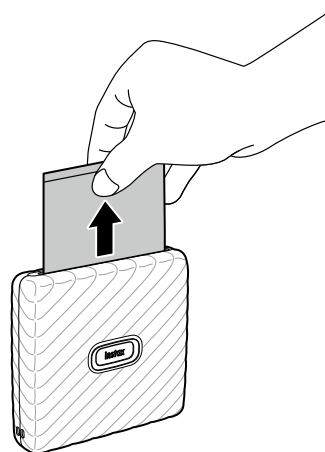

To edit images

The following image editing options are available before printing.

	Enters text on images.
	Zooms up/down or rotates images.
	Applies a filter on images.
	Adjusts the brightness of images.

Specifications

Recording method	3-color exposure with OLED
Film used	FUJIFILM instax WIDE Instant Film (sold separately)
Number of films	10 films/pack
Image size	62 mm × 99 mm
Supported image size	800 × 1260 dots
Printing resolution	12.5 dots/mm (318 dpi, 80 μm dot pitch)
Printing levels	256 levels per color (RGB)
Interface	Standard compliance: Bluetooth Ver. 4.2 (BLE)
Supported image format	JPEG, PNG, HEIF, DNG
Printing time	Image recording - photo output (fed out): Approximately 12 sec.
Approximate printing capacity	Approximately 100 prints (from full charge) * The number of prints depends on the usage conditions.
Power supply	Rechargeable lithium ion battery (internal type: not removable)
Charging time	Approximately 80 to 120 minutes (Charging time depends on the temperature and battery remaining level)
Power consumption	When printing: Approximately 3 W Power Off: Approximately 0.0 W (0.1 mW)
Auto power off function	5 minutes / Off * Deactivating the auto power off function will increase the energy consumption of the product.
Operating environment	Temperature: +5 °C to +40 °C Humidity: 20% to 80% (no condensation)
Main unit dimensions	139 mm × 127.5 mm × 33.7 mm (excluding projecting parts)
Main unit mass	Approximately 340 g (excluding film pack)
Supplied accessory	Micro USB cable (BOD700, Length: 30 cm) Stand (1) Strap (1)

*The above specifications are subject to change for performance improvement.

Troubleshooting

Please check the following items before considering a problem to be a malfunction. If the problem persists even after taking action, please contact the FUJIFILM service center for repair in your country or visit the website below.

FUJIFILM website: <http://www.fujifilm.com/>

If the following problem occurs...

Problem	Possible causes and solutions
I cannot turn on the printer.	- The battery may not be charged. Please charge the printer. - You did not press the Power button for long enough. Press and hold the Power button for approximately 1 second.
The battery loses its charge quickly.	If you use the printer in a very cold environment, the battery will drain quickly. Please keep the printer warm before printing.
The power cut off during use.	The battery level may be low. Please charge the printer.
Charging does not start.	Make sure that the USB power adapter plug is properly connected to the power outlet.
The printer takes too long to charge.	At low temperatures, charging may take longer.
Charging stops during charging.	Charge the battery in a temperature range of +5 °C to +40 °C. If you cannot charge the printer in this range, contact your FUJIFILM dealer or support center.
The printer does not function normally.	- There may be a temporary malfunction. Please press the reset button. If the printer still does not function normally, please contact our repair service center for repair. - The battery may not be charged. Please charge the printer.
The film pack does not load or does not load correctly.	- Please use FUJIFILM instax WIDE Instant Film (other films cannot be used). - Align the yellow mark on the film pack with the yellow alignment marker on the printer body, once aligned load the film into the printer.
The film does not unload.	- The film may be misaligned due to an impact such as vibration or dropping. Please load a new film pack. - If the film is jammed, turn the printer off and turn it on again. If the problem persists, remove the jammed film and then load a new film pack.
Some or all of the finished prints are white.	Do not open the film door until the film has been used up. If the film door is opened with film remaining, the film will be exposed and become white.

Problem	Possible causes and solutions
The print is uneven.	• Do not shake, bend, fold or hold the print immediately after it is printed. • Do not obstruct the film ejection slot.

IMPORTANT SAFETY NOTICE

This product has been designed to ensure the safety of the user when handled correctly and in accordance with the User's Guide and the instructions provided. It is important that both the product and the "instax WIDE" film are handled properly and used only to print pictures as instructed in the User's Guide and in the "instax WIDE" film instructions. For future reference keep the User's Guide in a safe, easy place.

WARNING

This symbol indicates danger, which could result in injury or death. Please follow these instructions.

WARNING

- ⚠ If any of the following instances occur, immediately unplug the Micro USB cable, turn the printer off and cease use.
 - The printer becomes hot, emits smoke, emits a burnt smell or is functioning abnormally.
 - The printer is dropped into water or any foreign objects enter the printer.
- ⚠ This device contains a built-in battery. Do not subject to heat, throw it into an open fire, drop or subject to impact. Doing so could cause the printer to explode.

WARNING

- ⚠ Never attempt to take this product apart. You may be injured.
- ⚠ If the printer is not functioning correctly, to avoid injury do not attempt to repair yourself.
- ⚠ If this product is dropped or damaged so that the internals are visible, do not touch it. Contact your FUJIFILM dealer.
- ⚠ Do not touch any parts within the inside of the back cover. This may cause injury.
- ⚠ Never get this product wet or handle it with wet hands. Doing so may result in an electric shock.
- ⚠ Promptly unplug the Micro USB cable once battery is fully charged.
- ⚠ Keep out of the reach of small children. This product could cause injury in the hands of a child.
- ⚠ Do not cover or wrap the printer or the AC power adapter in a cloth or blanket. This can cause heat to build up and distort the casing or cause a fire.



The "CE" mark certifies that this product satisfies the requirements of the EU (European Union) regarding safety, public health, environment and consumer protection. ("CE" is the abbreviation of Conformité Européenne.)

Hereby, FUJIFILM declares that the radio equipment type "instax Link WIDE" is in compliance with Directive 2014/53/EU. For more information, access the website below.
https://instax.com/link_wide/en/spec/



The "UKCA" mark certifies that this product satisfies the requirements of Great Britain (England, Scotland, Wales) regarding safety, public health, environment and consumer protection.
*UKCA: UK Conformity Assessed.

Simple Printer Care

■ Handling the Printer and Battery

- CAUTION - Do not expose to excessive heat such as sunshine, fire or the like. This can result in an explosion or the leakage of flammable liquid or gas during use, storage or transportation or disposal.
- CAUTION - Do not dispose of a battery into fire or a hot oven. Do not mechanically crush or cut the battery. This can result in an explosion.
- CAUTION - Do not subject to extremely low air pressure at high altitude, this may result in an explosion or the leakage of flammable liquid or gas.

■ Printer Care

1. **Do not open the film door until all film exposures have been used, doing so will prematurely expose the remaining film and render it unusable.**
2. Your printer is a fragile object. Do not expose it to water, sand or gritty materials.
3. Do not use solvent such as thinner or alcohol to remove dirt.
4. Keep the film chamber and printer interior clean to avoid damaging films.
5. Do not leave your printer in direct sunlight or hot places such as the inside of a car. Do not leave the printer in damp places for prolonged periods.
6. Moth repellent gas such as naphthalene may affect your printer and prints. Take care to keep your printer and prints in a safe, dry place.
7. Note that the temperature range within which your printer can be used is +5°C to +40°C.
8. Take great care to ensure that printed materials do not violate copyright, image rights, privacy or other personal rights and do not offend public decency. Actions that violate the rights of others, are contrary to public decency or constitute a nuisance may be punishable by law or otherwise legally actionable.
9. This printer is designed for domestic/personal use. It is not suitable for commercial use.

■ Charging the Battery

The battery has not been fully charged during manufacture. Please charge the battery fully before first use.

- Charge the battery using the supplied Micro USB cable.
- Charging times will increase at ambient temperatures below +10°C or above +35°C.
- Do not attempt to charge the battery at temperatures above +40°C or at temperatures below +5°C as the battery will not charge.

■ Battery Life

At normal temperatures, the battery can be recharged about 300 times. A noticeable decrease in the length of time the battery will hold a charge indicates that it has reached the end of its service life.

■ Caution: Handling the Battery

The battery and printer body may become warm to the touch after extended use. This is normal.

■ Certification marks acquired by the printer are located inside the film chamber.

■ Cautions During Printing



Do not shake the printer while printing.



Do not drop the printer while printing.



Do not cover the film ejection slot while printing.

■ "instax WIDE" Film and Print Care

See FUJIFILM Instant Film "instax WIDE" for film use instructions. Follow all instructions for safe and proper use.

1. Keep the film in a cool place. Do not leave the film in a place where the temperature is extremely high (e.g., in a closed car) for many hours.
2. Do not puncture, tear, or cut the "instax WIDE" film. If film becomes damaged, do not use.
3. When you load a film pack, use the film as soon as possible.
4. If the film has been kept in a place where the temperature is extremely high or low, bring it to room temperature before starting to print pictures.
5. Be sure to use the film before the expiration or "Use Before" date.
6. Avoid airport checked luggage scanning and other strong X-ray exposure. The effect of fogging, etc. may appear on unused film. We recommend that you carry the printer and/or the film onto the aircraft as carry-on luggage. (Check with each airport for more information.)
7. Avoid strong light, and keep the developed prints in a cool and dry place.
8. Do not puncture or cut the film as it contains a small amount of caustic paste (high alkaline). Never let children or animals put the film into their mouth. Also ensure that the paste does not come into contact with skin or clothes.
9. Should the paste inside the film comes into contact with skin or clothes, immediately wash off with plenty of water. If the paste comes into contact with the eyes or mouth, immediately wash the area with plenty of water and contact a doctor. Note that the alkaline inside the film remains active for about 10 minutes after the picture has been printed.

■ Cautions on Handling the Film and Prints

For full details, refer to the instructions and warnings on the package of the FUJIFILM Instant Film “instax WIDE”.



Information for traceability in Europe

Manufacturer: FUJIFILM Corporation

7-3, Akasaka 9-Chome, Minato-ku, Tokyo
Japan

Authorized representative in Europe:

FUJIFILM Europe GmbH

Balcke-Duerr-Allee 6, 40882 Ratingen
Germany

EU Importer: FUJIFILM Europe B.V.

Oudenstaart 1, 5047 TK Tilburg
The Netherlands

UK Importer: FUJIFILM UK Limited

Fujifilm House, Whitbread Way,
Bedford, Bedfordshire, MK42 0ZE
UK

Bluetooth® Devices: Cautions

IMPORTANT: Read the following notices before using the product's built-in Bluetooth transmitter.

■ Use only as part of a Bluetooth network.

FUJIFILM does not accept liability for damages resulting from unauthorized use. Do not use in applications requiring a high degree of reliability, for example in medical devices or other systems that may directly or indirectly impact human life. When using the device in computer and other systems that demand a greater degree of reliability than Bluetooth networks, be sure to take all necessary precautions to ensure safety and prevent malfunction.

■ Use only in the country in which the device was purchased.

This device conforms to regulations governing Bluetooth devices in the country in which it was purchased. Observe all location regulations when using the device. FUJIFILM does not accept liability for problems arising from use in other jurisdictions.

■ Wireless data (images) may be intercepted by third parties.

The security of data transmitted over wireless networks is not guaranteed.

■ Do not use the device in locations subject to magnetic fields, static electricity, or radio interference.

Do not use the transmitter in the vicinity of microwave ovens or in other locations subject to magnetic fields, static electricity, or radio interference that may prevent reception of wireless signals. Mutual interference may occur when the transmitter is used in the vicinity of other wireless devices operating in the 2.4 GHz band.

■ The Bluetooth transmitter operates in the 2.400GHz – 2.4835GHz. The maximum radio-frequency power is 9.10 mW.

■ This device operates on the same frequency as commercial, educational, and medical devices and wireless transmitters.

It also operates on the same frequency as licensed transmitters and special unlicensed low-voltage transmitters used in radio-frequency identification tracking systems for assembly lines and in other similar applications.

■ To prevent interference with the above devices, observe the following precautions.

Confirm that the radio-frequency identification transmitter is not in operation before using this device. If you notice that this device causes interference in low-voltage radio-frequency identification tracing systems, contact a FUJIFILM representative.

■ The following may be punishable by law:

- Disassembly or modification of this device.
- Removal of device certification labels.

■ Trademark Information

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc., and any use of such marks by FUJIFILM is under license.

If you have any inquiries about this product, please contact a FUJIFILM authorized dealer, or access the website below.
<http://www.fujifilm.com/>

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN